


1. TECHNICAL FEATURES

- * Based on patented Magnasphere® technology, used under license
- * Dimensions in mm magnet/sensor (l x h x d): 64 x 22.5 x 22.5 magnet: 51.5 x 14.3 x 22
- * 3 pos. screw terminal block:
 - * TMP: pry-tamper
 - * COM: common
 - * SW: primary contact
- * Version CLH-301-M-r with double integrated balancing: use screw terminal TMP e SW
- * Electrical parameters: (max., per circuit): 30VDC, 250mA, 0.25W
- * Fiber-glass reinforced nylon case.
- * Certification IMQ: Grade 3, Environmental Class II - EN50131-2-6


2. PACKAGE CONTENTS

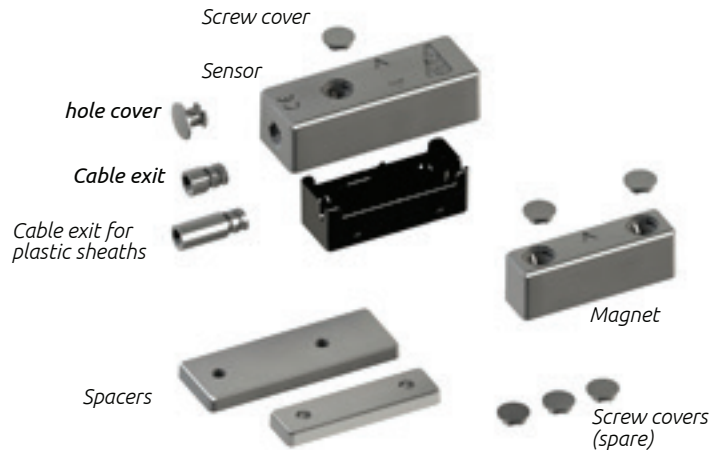

3. PREPARING THE SENSOR FOR INSTALLATION

- * The cable can exit from the back side or alternatively can exit laterally.
- * You can protect the cable with:
 - * the short cable exit;
 - * a plastic, 8mm internal diameter sheath which will fit exactly the long cable exit accessory;
 - * the stainless steel, reinforced sheath TSec part no. CLH-2G.
- * Screw the sensor using only the opposite hole to the exit cable side.
- * Place the fiber-glass reinforced nylon case.
- * Screw the second securing screw of the sensor.

4. IN-LINE INSTALLATION: WORKING GAPS

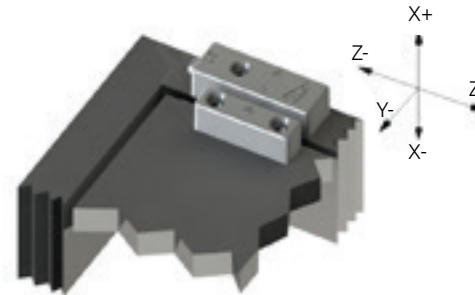

Mounting distance


Axis	Iron Mount.	No iron Mount.
Z	<=10mm	<=10mm
X	<=10mm	<=10mm
Y	<=7mm	<=15mm

Activation distance

Axis	Iron Mount.	No iron Mount.
Z	(22±9)mm	(20±9)mm
X	(22±9)mm	(20±9)mm
Y	(17±10)mm	(20±9)mm

- * Mount sensor and magnet as shown in the picture above.
- * Note that screw caps are anti-tamper, and should be positioned only after testing is complete.
- * To obtain a maximum security installation, it is recommended to minimise the operating distance between sensor and magnet.

5. RIGHT-ANGLED INSTALLATION: WORKING GAPS

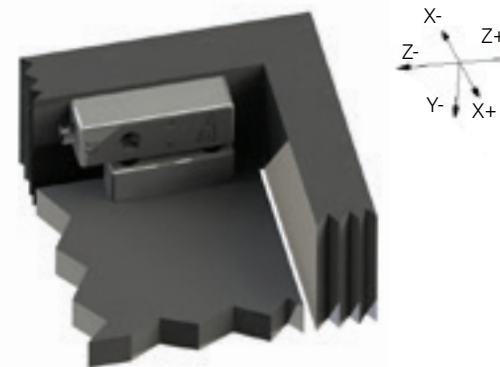

Mounting distance

Axis	Iron Mount.	No iron Mount.
Z	<=10mm	<=10mm
X	<=10mm	<=10mm
Y	<=10mm	<=10mm

Activation distance

Axis	Iron Mount.	No iron Mount.
Z	(22±9)mm	(21±10)mm
X	(22±9)mm	(21±10)mm
Y	(22±9)mm	(21±10)mm

- * Mount sensor and magnet as shown in the picture above.
- * Note that screw caps are anti-tamper, and should be positioned only after testing is complete.
- * To obtain a maximum security installation, it is recommended to minimise the operating distance between sensor and magnet.



6. SECURITY RECOMMENDATIONS

- * Note that screw caps are anti-tamper, and should be positioned only after testing is complete.
- * If necessary, use the supplied 5mm spacers to better align sensor and magnet.
- * **Note that there is no minimum operating gap: you can install magnet and sensor as close to each other as needed.**
- * To obtain a maximum security installation, it is recommended to minimise the operating distance between sensor and magnet.

7. OPTIONAL ACCESSORIES

- * For maximum security, we recommend installing the reinforced, stainless steel sheath part no. **CLH-2G10**.